



OPERATION MANUAL

(combined accompanying document)

**SEPARATING MACHINE
MC 100/70**

produced under license



AE81

CONTENT

1.	Introduction	4
2.	Purpose of the machine	4
3.	Machine specification	5
4.	Features and operation concept	7
5.	Safety requirements	11
5.1.	General safety instructions	11
5.2.	Safety features	12
5.3.	Noise factor	12
5.4.	Residual risks	12
5.5.	Protective means application	13
6.	Installation. Installation manual	13
7.	Machine setting	17
7.1.	Mc 100/70 machine setting	17
8.	Maintenance	20
8.1.	General instructions	20
8.2.	Maintenance	21
8.2.1.	Daily maintenance	21
8.2.2.	Preventive maintenance	22
8.2.3.	In-storage maintenance	24
9.	Troubleshooting guide	27
10.	Storage and transportation	28
11.	Disposal instructions	29
12.	Declaration of conformity	29
13.	Warranty liability	29
14.	Scope of delivery	31
15.	Acceptance report	31
16.	For notes	32
Annex 1	34
Annex 2	35
Annex 3	36
Annex 4	37